



ONE P70W

USER GUIDE

Let's get started.

orbitsound.com/support/

For an online version of this guide please visit the above link.

Eine deutsche Version dieses Leitfadens finden Sie unter dem oben. aufgeführten Link.

Pour une version Français de ce guide, veuillez consulter le lien ci-dessus.


Per una versione italiano di questa guida, visitare il link di cui sopra.

Para obtener una versión en Español de esta guía, visite el enlace que aparece arriba.

如需中文版本的指南, 請瀏覽上述連結。

1. Plug it in

Connect the power adapter to your speaker and turn it on.

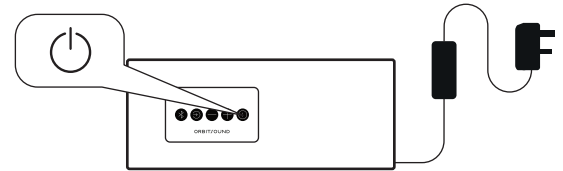

2. Get the app

Download the **Orbitsound** app.



orbitsound.com/app


Connect

Wi-Fi

Follow in-app instructions



0:03

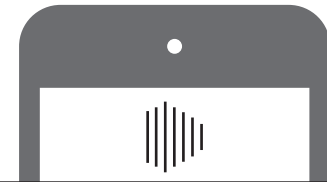


Bluetooth

Press and hold 3 sec




0:03

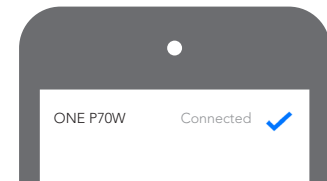


AUX



Optical

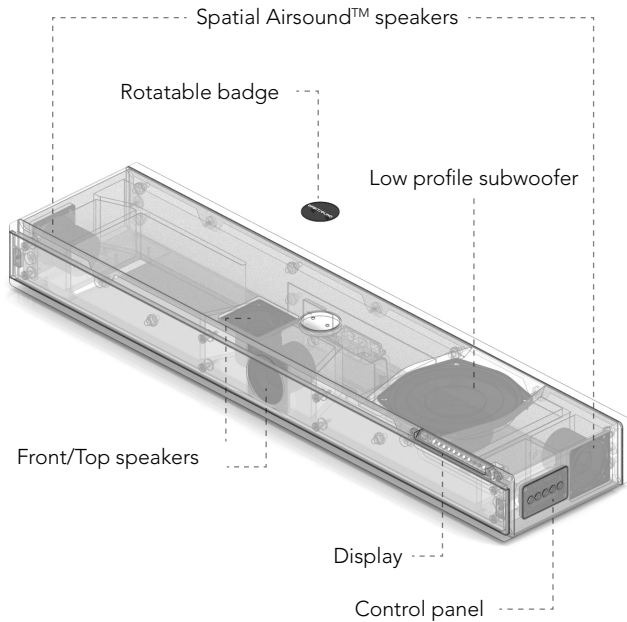

Inputs

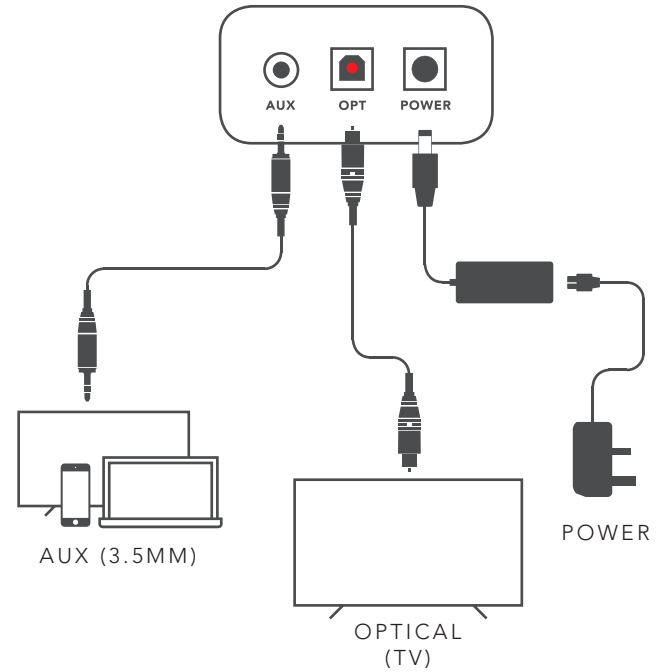

Controls & display



DISPLAY LIGHTS


- Standby
- Optical (TV)
- Wi-Fi & AUX
- Bluetooth
- Mute

Source

BUTTONS

- ⏻ Power On/Off
- + Volume Up
- Volume Down
- ↶ Source
- 📶 Bluetooth

Remote

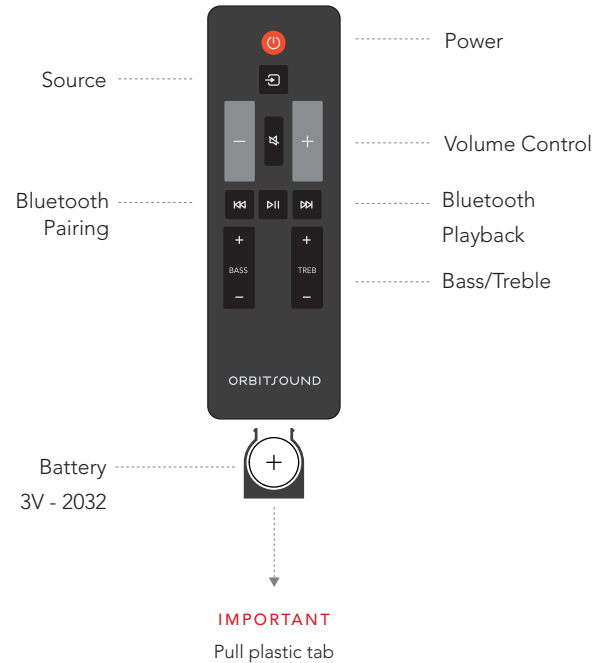

○ Optical

TV

We recommend using Optical to connect to the ONE P70 for the best possible sound.

IMPORTANT

Remove protective plastic covers from the optical cable.



Remove the optical input cap on the back of the ONE P70 or it may **damage your equipment.**


Turn your TV speakers off: To prevent an echo or external audio output, go to TV settings -> sound/audio menu. Select **Digital Audio (Optical)** as the audio output.

IMPORTANT: The ONE P70W does not support Dolby/DTS or multi channel surround. You may need to change your TV's digital audio output to **Normal** or **PCM** to ensure best performance.

● AUX

CD/MP3/TV

For other music players, record decks, CD, MP3 or other devices, use the AUX 3.5mm jack input. Press **SOURCE** until the green input is highlighted.

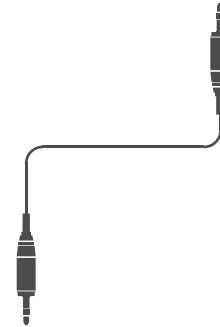


Make sure you increase the volume on your device to **80% or higher.**

• Bluetooth


To use your phone / tablet with Bluetooth, you need to pair it to the ONE P70W

PAIRING ON THE CONTROL PANEL

Press and hold  (**BLUETOOTH**) until the blue light flashes quickly. Look for 'Orbitsound ONE' in your devices Bluetooth list and connect.

OR

PAIRING WITH THE ORBITSOUND REMOTE

Press and hold  (**PLAY/PAUSE**) until the blue light flashes quickly. Look for 'Orbitsound ONE' in your devices Bluetooth list and connect.

If you are having issues with your Bluetooth connection: do a System Reset by pressing and holding **POWER** and **SOURCE** for 3 seconds.

 +  3 seconds

• Wi-Fi

Wi-Fi enables seamless streaming and the ability to connect multiple speakers.



1. Download and install the free **Orbitsound** app. Follow the in-app instructions.
2. When prompted by the app, press and hold (**SOURCE**) on the control panel or remote control for three seconds. This enters Wi-Fi setup mode to enable the ONE P70W to connect to your Wi-Fi.




SETUP:  or  3 seconds

WI-FI RESET: If you are having difficulty connecting your speaker via Wi-Fi, reset the Wi-Fi settings by pressing and holding the (**SOURCE**) button for 10 seconds.

WI-FI RESET:  10 seconds

Remote learning

Alternative remotes can learn the controls of the ONE P70W.


1. Press and hold  +  (**POWER** and **VOLUME+**) together on the control panel for 3 seconds until the lights animation is displayed.
2. Press the button on the control panel you wish to teach.
For example  (**VOLUME +**).
3. Press the button on your TV remote you wish to correspond.
For example **VOLUME +**.
4. Lights on your speaker will animate to indicate learning.
5. Press the **same button** from **Step 3** on your TV remote again.
6. Repeat the same process for other controls.

Only **Infra-Red** remotes are compatible.



POWER cannot be learnt.

Optical volume boost

To make the **OPTICAL** volume louder:

1. Change the  (**SOURCE**) to **OPTICAL**.
2. Increase the volume to **maximum/full**.
3. Press and hold **VOLUME+** on the **Orbitsound remote** for 5 seconds.
4. Press **VOLUME +** to access additional volume.

To exit mode:

 
Do a system reset by pressing and holding  +  (**POWER** and **SOURCE**) together for 3 seconds.

This will **only** affect the **OPTICAL** source.

This function **can only be enabled** using the **VOLUME +** on the **Orbitsound Remote**.


Position options

1. HIGH WALL MOUNT




Front speaker facing down.

 2. SURFACE MOUNT



Front speaker facing towards.

3. LOW/SHELF MOUNT

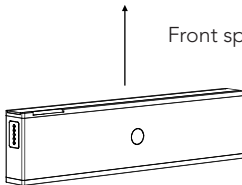

Front speaker facing up.

Low/shelf options

REVERSE DISPLAY

When flipping the orientation you can change the display so the display reads left to right.

Press and hold  +  (**POWER + VOLUME -**) for 5 seconds. Lights will flash to indicate the change.



ROTATE BADGE

You can also rotate the Orbitsound badge so it faces the right way.

To pop the Orbitsound badge out use a strong piece plastic, such as a credit card, to ease out the badge.


Wall mounting

OPTION A.

Easily wallmount your ONE P70W with the included template and kit.

OPTION B.



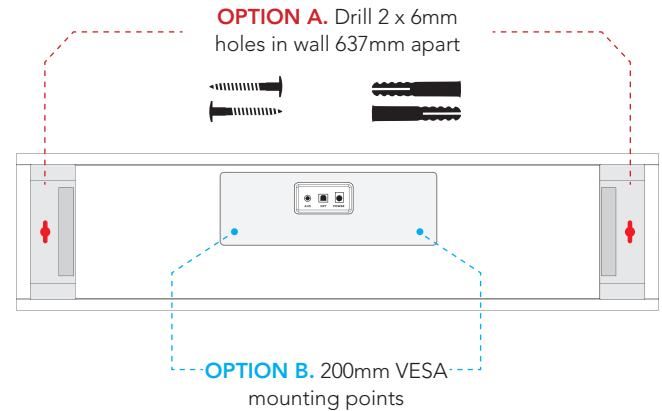








Standard 200mm VESA mount.
VESA is a universal bracket mounting system.



IMPORTANT

Orbitsound accepts no liability for damage due to improper installation. Ensure the wall is suitable for the wall plugs provided. If not you may need to purchase additional plugs.

Quick reference

		CONTROL PANEL	OR	REMOTE
P.13	Wi-Fi Setup		3 sec	
P.13	Wi-Fi Reset		9 sec	
P.12	Bluetooth Pairing		3 sec	
P.14	Remote Learning	 + 	5 sec	
P.12	System Reset	 + 	3 sec	
P.17	Reverse Display	 + 	3 sec	

For more information, please visit: www.orbitsound.com/support

 **DESIGNED
IN BRITAIN**