

# ORBITSOUND

## Remote control guide

Power – turn the soundbar on or off – all soundbars.

Treble - : turns the treble down – all soundbars.

Bass- : turns the bass down – all soundbars.

Volume- : turns the volume down – all soundbars.


RND : sets the track on a docked iPod to play randomly – T9/T12/T10

UP – lets you scroll up on the docked iPod when using the iPod menu – T9/T12/T10.

<<: Lets you go back to the beginning of the track, press twice to go back to the previous track. - All soundbars excluding SB60/SB60LX

DOWN– lets you scroll down on the docked iPod when using the iPod menu – T9/T12/T10.

I menu – this lets you use the menu option on the docked iPod. – T9/t12/t10.

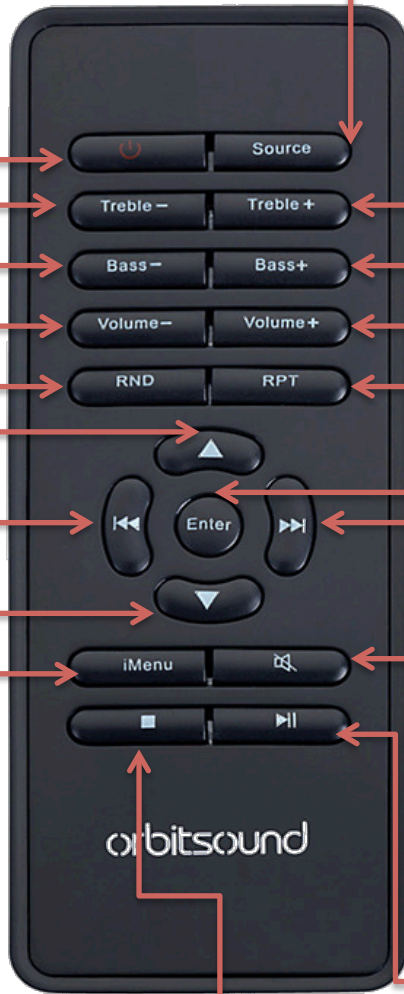

Source: changes the source on the soundbar – all models.

Treble + : turns the treble up – all soundbars.

Bass + : turns the bass up – all soundbars.

Volume +: turns the volume down – all soundbars.

RPT: sets the track on a docked iPod to play on repeat press once to repeat one track twice for repeat playlist icon will appear on iPod – T9/T12/T10

Enter – lets you select a track on the iPod menu of a docked iPod – T9/T12/T10

>>: Lets you go to go to the next tracks - all soundbars excluding SB60/SB60LX

Mute: lets you mute the sound, press again to un mute the sound. – All soundbars.

Pause/play: lets you pause and un pause the track. – All soundbars except SB60/SB60LX

Stop – lets you stop the track when iPod is docked or device is connected to Bluetooth. – All soundbars excluding SB60/SB60LX.